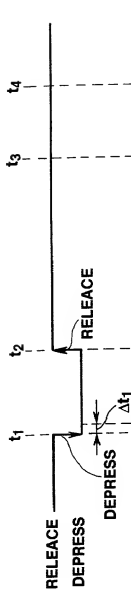
 


FIG.1(A) RECORDING START
PUSH BUTTON SWITCH**FIG.1(B)** RECORDING STOP
PUSH BUTTON SWITCH**FIG.1(C)** KEY CLICK SOUND**FIG.1(D)** MICROPHONE INPUT**FIG.1(E)** RECORDING INTERVAL**FIG.1(F)** RECORDED RESULT

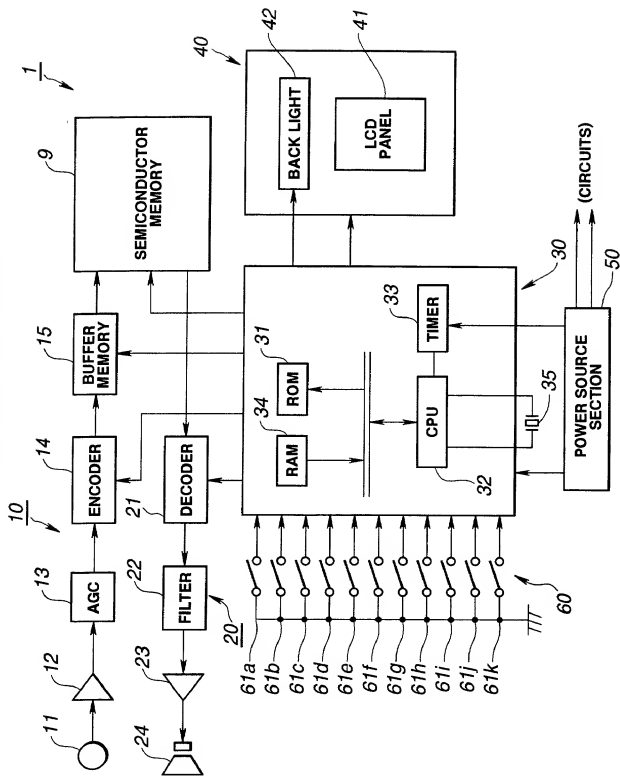


FIG. 2

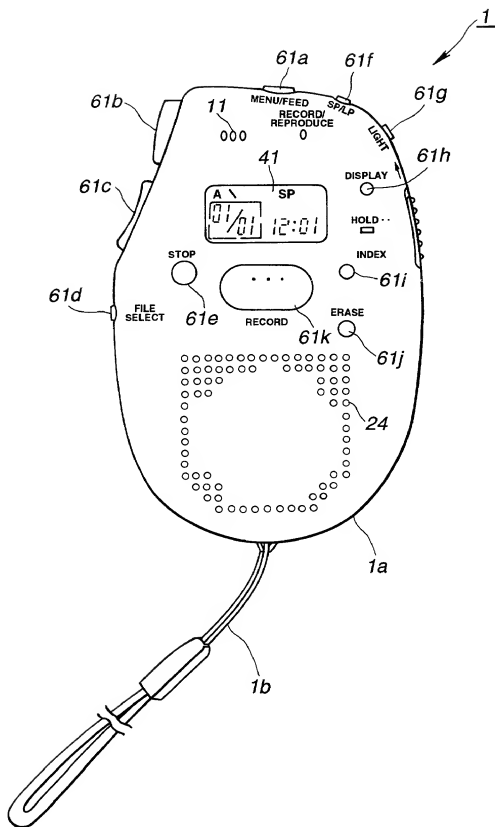


FIG.3

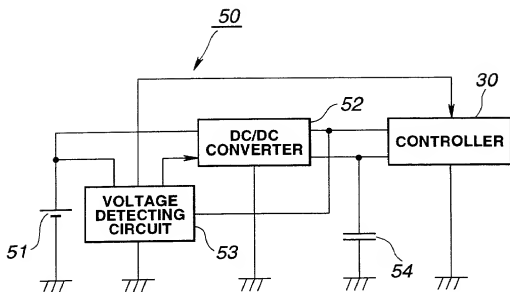


FIG.4

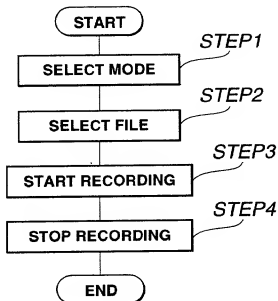


FIG.5

FIG. 6(A) RECORDING START
PUSH BUTTON

FIG. 6(B) STOP PUSH BUTTON


FIG. 6(C) CLICK SOUND

FIG. 6(D) MICROPHONE INPUT

FIG. 6(E) BUFFER MEMORY
OUTPUT

FIG. 6(F) RECORDING INTERVAL

FIG. 6(G) RECORDED RESULT

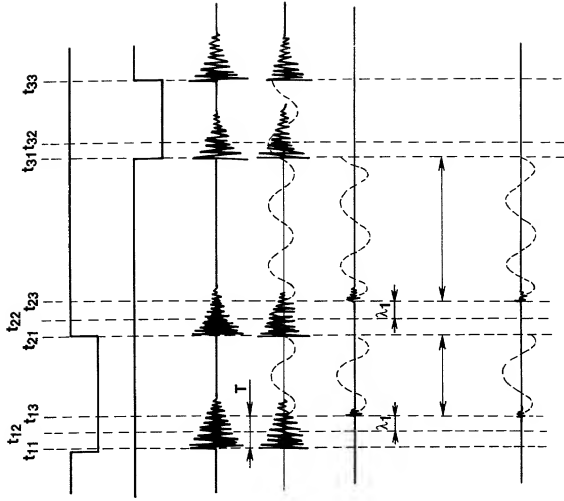

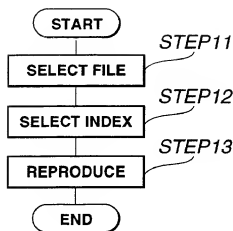


FIG.7

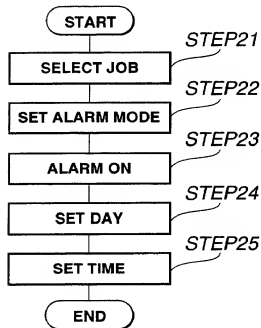


FIG.8